


## Instructions for regeneration




1 Remove the larger dirt by shaking or tapping your filter gently onto a clean surface. **DO NOT** use compressed air which may damage the filtering element.

1

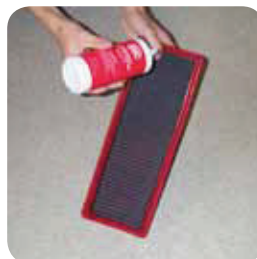


2 Distribute the BMC detergent on the filter. Allow to absorb for about 10 minutes. **DO NOT** use caustic products such as petrol or oil. **USE ONLY BMC DETERGENT.**

2

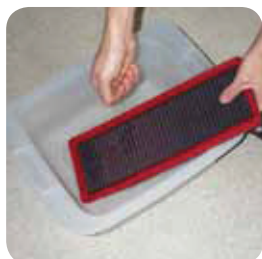

3 Wash your filter in cold water. Rinse well ensuring that dirt does not enter the filter pleats. **DO NOT** use high-pressure water.

3

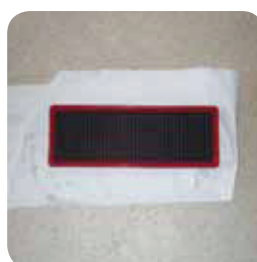

4 Let in a accurate proper way your filter dry naturally away from heat sources on absorbent paper or on a clean cloth. **DO NOT** use a hair-dryer or compressed air.

4



5 Remove the original top from the regenerating fluid bottle. Make a small hole in the spout dispenser and screw onto the bottle. For correct oiling we recommend passing the regenerating fluid twice over every pleat on both sides of the filter.

5



6 The oiling procedure using the aerosol spray. Hold the spray 15 cm from the filter and spray the complete surface. Repeat the operation on both sides of the filter.

6



7 Allow the oil to absorb on a level surface for around 30 minutes. Remove any excess oil on the rubber and check that the filtering element is homogeneously red (Picture 7). If not, repeat the oiling process described previously. After oiling the filter is ready to be reinstalled.

7

CODE	ARTICLE
<b>WAFLU250</b>	Regeneration Fluid 250 ml bottle
<b>WAFLU200</b>	Regeneration Fluid Spray 200 ml bottle
<b>WADET500</b>	Detergent 500 ml
<b>WA200-500</b>	complete kit [Detergent + Reg. Fluid Spray]
<b>WA250-500</b>	complete kit [Detergent + Reg. Fluid]

**WA200-500**  
includes detergent and a liquid Reg. Fluid aerosol spray dispenser.



**WA250-500**  
includes detergent and a Reg. Fluid liquid dispenser

